DYNABAE TRADE QUALITY SINCE 1995

350MM LOW PRESSURE

Instruction User Manual & Warranty

CAUTONRadhAssentdgaatelystudionsetoepeetinginettaikiduuesteence

DYNABACEZE

Thank you & Congratulations on the purchase of your Dynabreeze 350mm Low Pressure Misting Ring

To find out more information on this product, please visit **www.dynabreeze.com.au** or contact:

Tradeware

Address	45 Birralee Rd, Regency Park SA 5010		Email	info@tradeware.com.au
Phone	au 1300 658 494	NZ 0800 689 960	Website	www.tradeware.com.au

SPECIFICATIONS


Model	FA-29114
Max Flow	1.892LMP
Min - Max Working Pressure	30-125psi
Max Temperature	30°C
Nozzle Orifice	0.3mm
Nozzle Thread	10/24unc
O-Ring Size	Inner diameter 4mm/Thickness 1mm
Diameter of Ring	350mm
Product Weight	0.5KG

OPERATION CONDITIONS & SAFETY PRECAUTIONS

WARNING:Pleasereadbeforeoperating.Basicsafetyprecautionsshouldbefollowedtoreducetherisk of fire, electric shock and injury to persons or property.

- Before fitting the misting ring to the fan, connect to a hose and check for any leaks to ensure the fittings are sealed correctly. Once there are no leaks, the misting ring can be placed onto the face of the fan.
- This product is intended for use with mains pressure water.
- Ensure fan is on before turning on the water supply.
- Ensure the nozzles are facing out and away from the fan motor.

- If you are in any doubt about whether this product is properly installed, contact the manufacturer.
- Remove water source before moving or cleaning it.
- **DO NOT** touch any electrical switch or plug with wet hands.
- **DO NOT** drop or insert any objects into openings in the product.

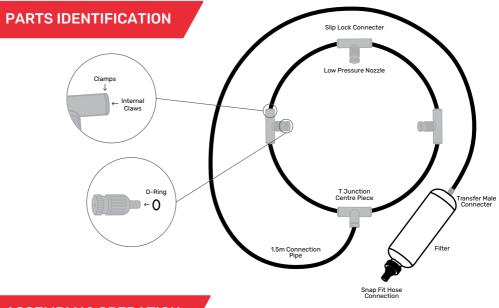


ASSEMBLY & OPERATION


- 1. Remove all contents from the box and check all parts are included.
- 2. Insert the combined pipe and filter into the t-junction centre piece.



3. Secure the misting ring centrally onto the face of the fan using the supplied cable ties and trim off any excess. Ensure the 3 nozzles are facing straight out.

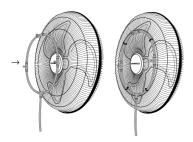

4. Connect the hose connection to the (off) water supply and turn on the fan.

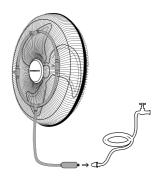

- 5. Once the fan is on, the water supply can be turned on. Ensure that any wind is behind the fan.
- 6. To turn off the mist, first turn off the water supply and then turn off the fan to ensure water does not spray onto the fan motor.

NOTE: If the nozzle drips a few actions can be taken such as tightening the nozzle as much as possible or increase the water flow.



WARRANTY

Dynabreeze offers a 1 Year Warranty according to AustralianConsumerLaw.Pleaserefertothewebsite www.dynabreeze.com.auorcontactusformoredetails.

SPARE PARTS

Sparepartscanbepurchasedseparatelybycalling Tradeware.

Model Code	Description
FA-29114A	Filter
FA-29114B	2.5m Pipe
FA-29114C	3 x Slip lock connecters, 3 x Nozzle, 1 x T-Junction centre piece
FA-29114D	3 x Nozzles



Tradeware

45 Birralee Road, Regency Park South Australia 5010 info@tradeware.com.au AU 1300 658 494 Nz 0800 689 960

www.tradeware.com.au

